

**DOOR PIN DETAIL**


Scale bars are 1/8"  
 Assume stock is 3/4" thick  
 Vertical measure (17/32") is not critical – I usually  
 make everything else exact, and wing this one.

Order of assembly:  
 Slide top "shelf" into sliding dovetail of both sides  
 Slide back into grooves in sides and top  
 Assemble dovetails.

NOTE:  
 You will have to rack this a bit during assembly, so your  
 joints have to be just right. You can skip glue if you want,  
 or only glue the DT joints.

1/4" = 1"

"Top" is connected to sides with sliding dovetail. I use 12 degree dovetails.

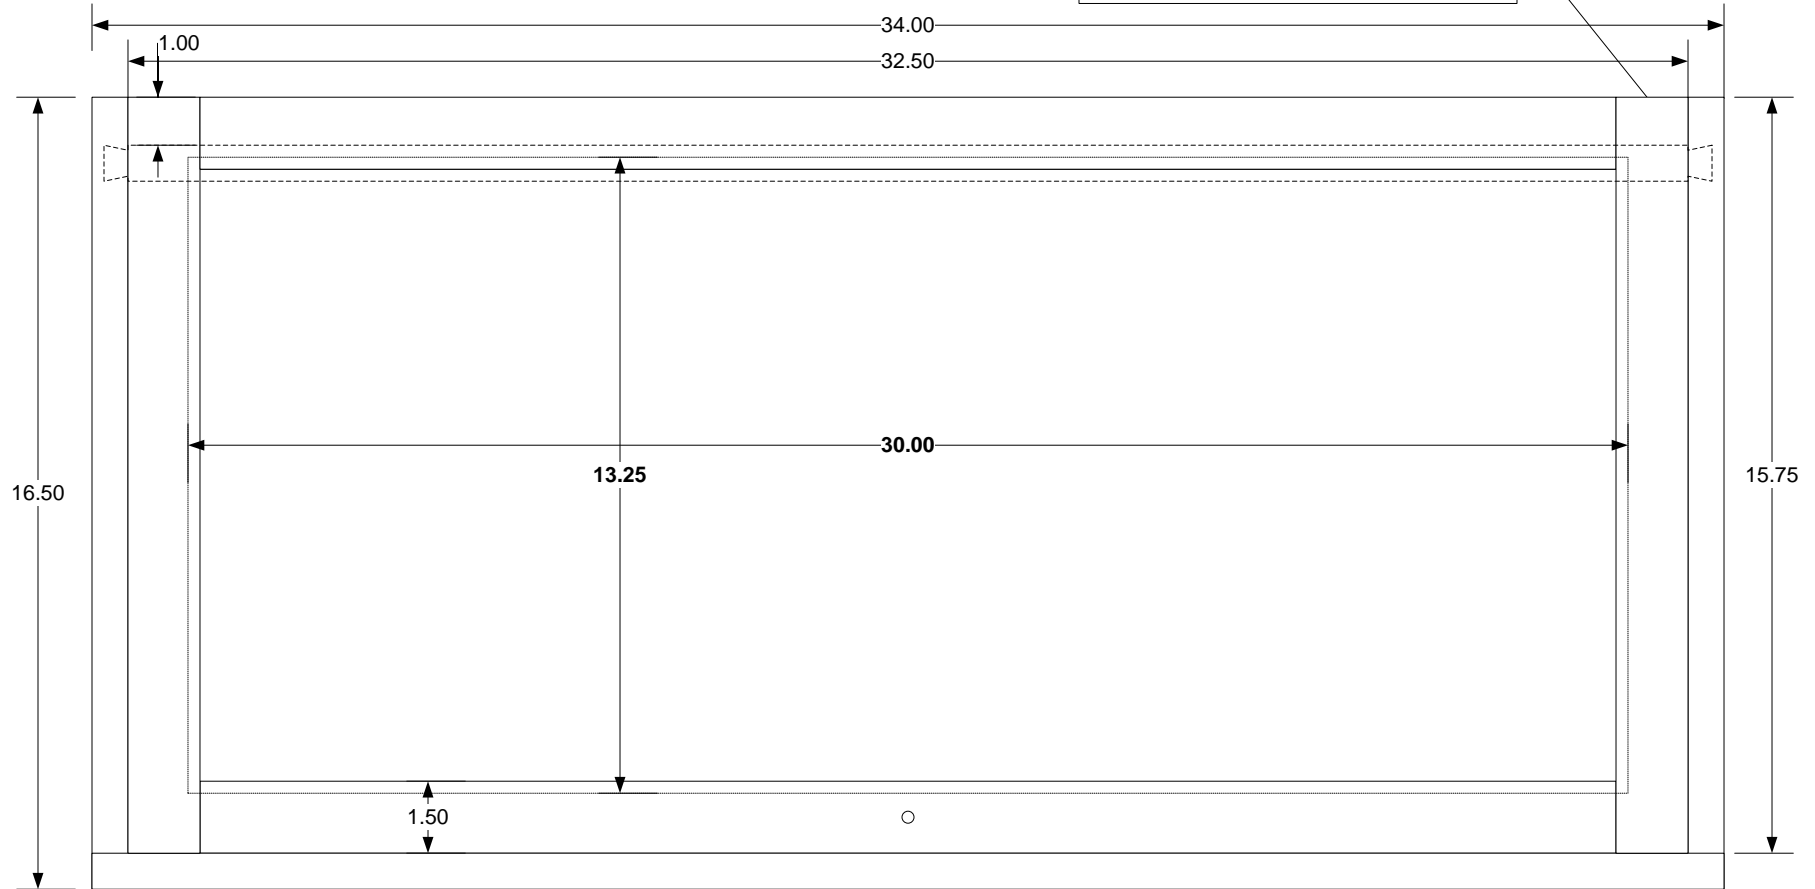

Sides are dovetailed into bottom

